

Irrigation Line Cleaning and Disinfecting Program




Directions

Step 1: Remove mineral buildup in irrigation lines with GreenClean® Acid Cleaner at 1:100 and hold for 1–2 hours then flush with fresh water.

Step 2: To remove inner working layer of biofilm inject SaniDate® 5.0 at 1:100 and hold for a minimum of 3 hours. Optional hold time is 8–12 hours. Flush with fresh water.

Pro Tip: When flushing system do it in a manner that does not force dead biomass through small/micro emitters.

NOTE: This program should only be carried out when greenhouses are empty and no crops are present.

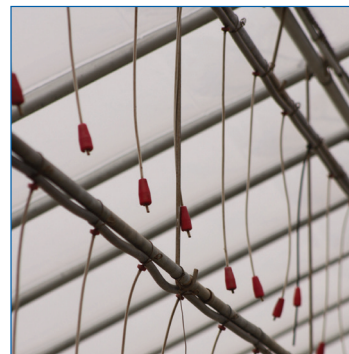

SaniDate® 5.0
GreenClean®
ACID CLEANER

1-888-273-3088 | [BioSafeSystems.com](https://www.BioSafeSystems.com)

©2022 BioSafe Systems LLC.
Always read and follow label directions. HT18-05.3